




SHOMAL Engineering & Manufacturing Co.

ماشین سازی شمال


OPERATING INSTRUCTIONS

MARK SERIES OF STAINLESS STEEL JUNCTION / TERMINAL BOXES TYPES I, II, III, IV, V, VI

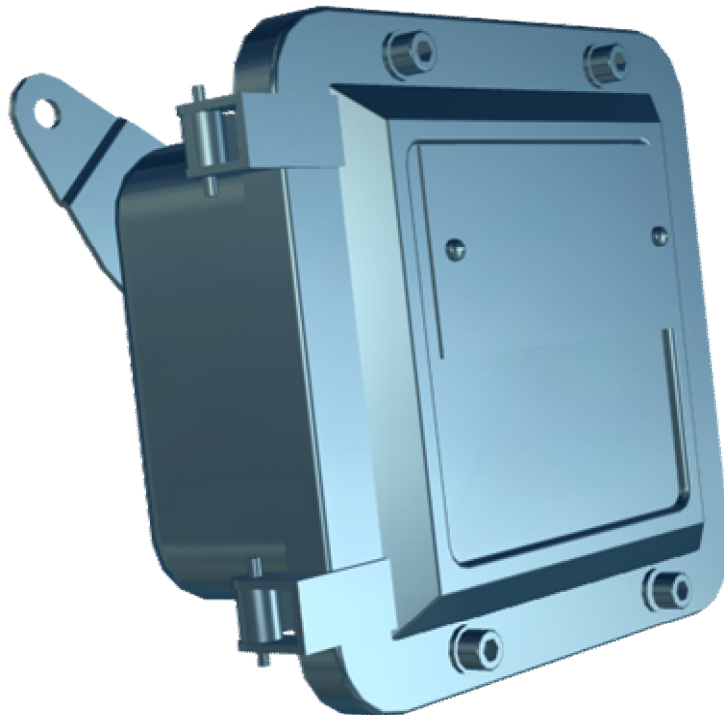


MARK III

Document number: W1-09(PCD-P-01)/02

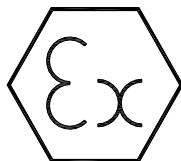

THIS GUIDE SHOULD BE READ CAREFULLY BEFORE INSTALLATION.
INCORRECT INSTALLATION AND USE OF THE JUNCTION BOXES CAN INVALIDATE THE GUARANTEE!

MARK III
DIMENSIONAL DETAILS

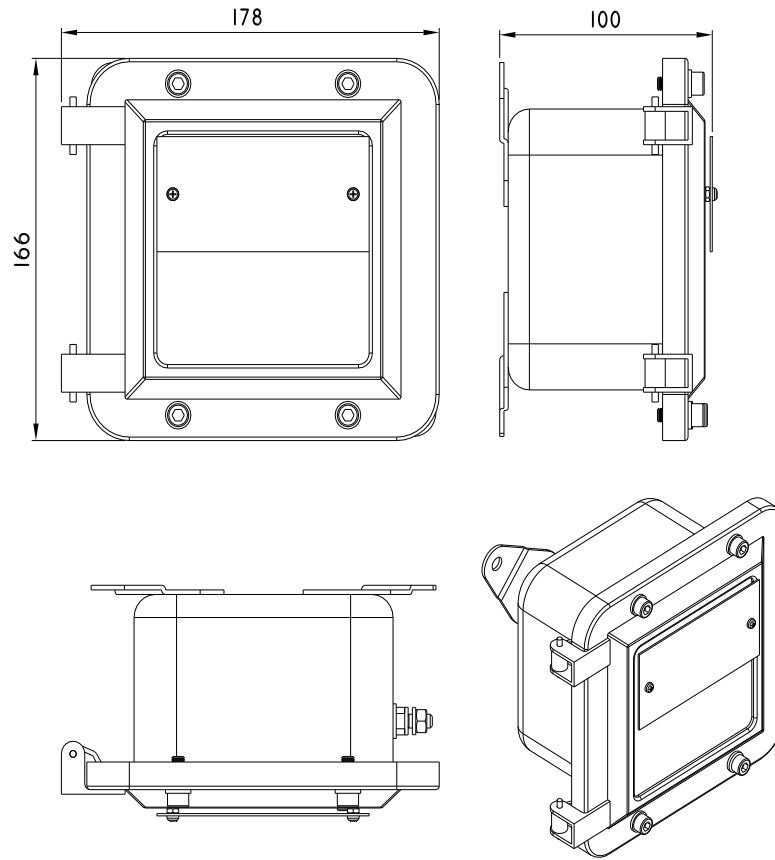

DIMENSIONS (mm)			
	INTERNAL	EXTERNAL	FIXING BRACKETS CENTERS
LENGTH	118±5	178±5	210±1 DIAGONAL
WIDTH	118±5	166±5	-
HEIGHT	80±5	100±5	-

IMPORTANT NOTES:

- 1) THIS GUIDE SHOULD BE READ CAREFULLY BEFORE INSTALLATION,
- 2) INCORRECT INSTALLATION AND USE OF THE JUNCTION BOXES CAN INVALIDATE THE GUARANTEE,

CONFORMITY WITH STANDARDS

THE JUNCTION BOXES MARK I TO MARK VI MEET THE REQUIREMENTS OF THE FOLLOWING STANDARDS::

IEC:	EN:
IEC 60079-0:2007	EN 60079-0:2009
IEC 60079-7:2006	EN 60079-7:2007
IEC 60079-11:2006	EN 60079-11:2007
IEC 60079-31:2008	EN 60079-31:2009

94/9/EC: EQUIPMENT AND PROTECTIVE SYSTEMS INTENDED FOR USE IN POTENTIALLY EXPLOSIVE ATMOSPHERES.

THE JUNCTION BOXES ALSO FULFILL FURTHER REQUIREMENTS SUCH AS THOSE OF THE DIRECTIVE ON ELECTROMAGNETIC COMPATIBILITY (89/336/EEC).

THE JUNCTION BOXES HAVE BEEN DESIGNED, MANUFACTURED AND TESTED ACCORDING TO THE ISO 9001:2008.

SAFETY INSTRUCTIONS



THE JUNCTION BOXES ARE NOT SUITABLE FOR ZONE 0 AND ZONE 20 HAZARDOUS AREAS. THE TEMPERATURE CLASS AND EXPLOSION GROUP MARKED ON THE JUNCTION BOXES SHALL BE OBSERVED.

THE APPARATUS SHALL NOT BE USED IN DUST LAYERS > 50mm ACCORDING TO EN 60079-31.

MODIFICATIONS TO THE JUNCTION BOXES OR CHANGES OF THEIR DESIGN ARE NOT PERMITTED. THEY SHALL BE USED FOR INTENDED PURPOSE AND IN PERFECT AND CLEAN CONDITION.

FOR REPLACEMENT AND REPAIR ONLY GENUINE SHOMAL SPARE PARTS SHALL BE USED. REPAIRS THAT AFFECT THE EXPLOSION PROTECTION MAY ONLY BE CARRIED OUT BY **SHOMAL** OR QUALIFIED ELECTRICIAN IN COMPLIANCE WITH THE RESPECTIVE NATIONAL REGULATIONS.

PRIOR TO TAKING THE JUNCTION BOXES INTO OPERATION, THEY SHALL BE CHECKED IN ACCORDANCE WITH THE “TAKING INTO OPERATION “OF THIS MANUAL. BEFORE THE INITIAL OPERATION, ANY FOREIGN MATTER SHALL BE REMOVED FROM THE JUNCTION BOXES.

OBSERVE THE NATIONAL SAFETY RULES AND REGULATIONS FOR PREVENTION OF ACCIDENTS AS WELL AS SAFETY INSTRUCTIONS INCLUDED IN THIS OPERATING INSTRUCTION.

FIELD OF APPLICATION

CAT II 2G for use in zone 1 or zone 2. Area as defined in EN 60079-14.

CAT II 2D for use in zone 21 or 22. Area as defined in EN 60079-14.

SERVICE TEMPERATURE: -40°C TO +80°C

PERMANENT STORAGE TEMPERATURE IN ORIGINAL PACKAGE:

-40°C TO +80°C

CERTIFICATION MARKING:

Mark III enclosure can be marked as follows:

ACCORDING TO ATEX:

CERTIFICATE NO.: TUV 11 ATEX 7155X

ACCORDING TO IECEX:

CERTIFICATE NO.: IECEX TUR 11.0021X



II 2 GD

Ex e II T6 Gb	or	Ex e II T6 Gb
Ex ia IIC T6 Gb	or	Ex ia IIC T5 Gb
Ex t IIIC T80°C Db	or	Ex t IIIC T95°C Db

TERMINAL BOX WATTAGE FACTOR:

For calculation method for checking terminal capacity vs. maximum permitted power dissipation see page 6 of this manual.

TO OPEN THE LID

1. Disconnect power, (isolate all circuits).
2. Un-tighten all of M6 lid screws.
3. Carefully open the lids on its hinges ensuring the sealing gasket is not damaged or misplaced.

TO CLOSE THE LID

1. Any foreign matter shall be removed from the apparatus.
2. Check that the sealing gasket is secured inside the lid, and undamaged. Make sure that the lid is refitted correctly.
3. Locate and tighten the M8 lid screws using 4.5 Nm torque for first pass and 7 N/m for final pass. If the screws are over tightened the apparatus can be damaged.

ENCLOSURE INSTALLATION

1. The IP rating of the enclosure must be maintained for the area of use, by the use of correct arrangement of Cable /gland /sealing arrangements and in accordance with the installation codes as detailed in *EN 60079-14, EN 60079-31*, and this operating instructions.
2. Where other certified components are part of assembly, the user must take in to account any limitations listed on relevant certificates.
3. If an optional Breather/ Drain as listed in the enclosure certificate is fitted, the enclosure must be sited such that the Breather/ Drain is pointing vertically downwards from it's bottom.
The IP rating of the Breather Drain should match with the IP rating of the enclosure.
4. The enclosure has Metric clearance/plain entry holes as standard. Alternative clearance holes are available. Provided they are to a recognized standard e.g. BSPP, ET etc. (Parallel threads only).
Plain entry holes must maintain the following:
 - a) The plain hole shall be no larger than 0.7mm above the major diameter of the entry thread.
 - b) Glands or stopping plugs shall be secured internally by suitable locknuts, such that they will not be dislodged by a 7Nm impact.
 - c) The enclosure shall be maintained at IP 66 or 68 by a suitable sealing washer under the shoulder of the cable gland.
 - d) All unused entry holes must be sealed by a suitable stopping plug, as listed on the enclosure certificate. The stopping plug shall be held in place by a locknut and also the IP rating of the junction box shall be maintained for zone of use.The apparatus must not be modified without reference to **SHOMAL** Co., as this will invalidate certification.

TERMINAL WIRING (TW)

- a) All wiring must be carried out in accordance with the relevant code of practice and/ or instruction e.g. *EN 60079-14 and EN60079-31*.
- b) The voltage and current and maximum dissipated power shown on the label must not exceed.
- c) When use as a general purpose junction box or marshaling box the circuits carrying current $\geq 1\text{ A}$ shall be individually protected against over current such that the protective device operates effectively at no more than 1.45 times the current carrying capacity of the smallest conductor used in that circuit.
- d) Where a major portion of the terminals are carrying maximum rated current the temperature at the branching point of the conductors may exceed 70° C . Under this circumstances the installer must insure that the limiting temperature for the cable insulation used acceptable e.g. 85° C (T6) or 100° C (T5).
- e) The wiring installation must extend to within 1mm of the metal face of the terminal, unless the relevant certificates allow more. (See terminal schedule for limitations).
All lids must be insulated for the appropriate voltage.
- f) Not more than one single or multiple standard lead shall be connected in to either side of the terminals, unless the relevant component certificate allows more, or unless the multiple conductors have been previously joined in a suitable manner (for example with an insulated crimped boot lace ferrule, mounted in a vertical position) such that they form a single cohesive item for insertion into a terminal way. A parallel shaft screw driver of the correct size should be used.
- g) Only those terminals shown on terminal schedule attached may be incorporated in the box.(see table 3)
The installer must insure that the condition of use for the terminals outlined is complied with.
- h) All terminal screws used and unused shall be fully tightened down.
- i) The installer shall ensure creepage and clearance distance are not reduced, especially between intrinsically safe (is) and non-is circuits (e.g. 50mm clearance).
- j) The use of any cross connection devices between adjacent terminal ways shall be in accordance with the requirements of the relevant component certificate listed on held on.
- k) Use of the terminal box at ambient temperature below -20° C is dependant upon the minimum service temperature of the terminals.
- l) When connecting a terminal with a conductor that is below the maximum cross section area maximum amps/pole must be reduced in line with the maximum amps indicated for the terminal equivalent to the conductor size being fitted e.g. for a terminal that can take a maximum conductor size of 10 mm^2 at 50 amps, but is fitted with a 4 mm^2 conductor then the current shall be reduced to maximum a 21 amps, or the rating on the junction box lid label (whichever is the lowest).

EARTH CONNECTION

These enclosures have an integral internal/external earth stud assembly suitable for the largest conductor size used in the box.

1. In the case of painted boxes, consideration must be given to the removal of paint e.g. under the earth stud on the inside of the box which may lead to corrosion of the enclosure and potential reduction in earth protection. This area following installation must be protected against corrosion.

TAKING INTO OPERATION

Prior to taking the apparatus into operation, the test specified in the relevant national regulations will have to be carried out.

Apart from that, the correct functioning and installation of the apparatus in accordance with this operating instructions and other applicable regulations will have to be checked.

Incorrect installation and use of the junction box can invalidate the guarantee.

MAINTENANCE / SERVICING

The relevant national regulations which apply to the maintenance/servicing of the electrical apparatus in explosive atmosphere shall be observed.

Before opening the enclosure make sure that the apparatus is disconnected from the supply voltage, or take appropriate protective measures.

The required maintenance intervals depend on the respective application and will therefore have to be determined by the user dependent on the conditions of use.

When servicing the apparatus, particularly those parts that are decisive for the type of protection against explosion, will have to be checked (e.g. intactness of enclosure, cable glands, efficiency of the cover gaskets).
If during servicing repairs prove to be necessary, the Repair / Overhaul / Modification of this manual will have to be observed.

REPAIR / OVERHAUL / MODIFICATION

Repairs may only be carried out with genuine **SHOMAL** spare parts.

Repairs that affect the explosion protection may only be carried out by **SHOMAL** or a qualified electrician in compliance with the applicable rules.

Modifications to the apparatus or changes of its design are not permitted.

DISPOSAL / RECYCLING

When the apparatus is disposed of, the respective national regulations on waste disposal will have to be observed.

CALCULATION METHOD FOR CHECKING TERMINAL CAPACITY vs. MAXIMUM PERMITTED POWER DISSIPATION

The maximum dissipated power of junction box is given by the following formula:

$$P = R_{tot} \times I^2 \times N$$

Where:

P = Maximum dissipated power in watts.

R_{tot} = Combined Terminal Resistance + Conductor Resistance (See *BS 6360* & table 1 below) in Ohms.

I = Rated Current of Terminal in Amps

N = Number of terminals fitted

The conductor resistance is calculated from the length of conductor used for each terminal within the enclosure, multiplied by the cable resistance as defined by the cable manufacturer.

Typical cable resistances are given in Table 2, but may vary depending on the cable manufacturer.

Terminal resistances are defined in Table 3 as per terminal certification data.

EXAMPLE:

Assume a junction box which has a maximum dissipated power of **8.4W**.

Consider **0.365m** length for its maximum internal linear dimension.

The junction box fitted with **25 SAK 2.5** terminals, operating at **7A** each with **2.5mm²** cable attached:

Resistance of conductor = $0.00741 \Omega/\text{m} \times 0.365 \text{ m} = 0.0027\Omega$ per conductor

Resistance of terminal = 0.00035Ω

Total resistance per terminal = $0.00035\Omega + 0.0027\Omega = 0.00306\Omega$

Therefore $p = I^2 \times 0.00306\Omega \times 25 \text{ terminals} = 3.74\text{W}$

Since the maximum permitted dissipated power is measured at 8.4W, therefore the assembly of 25 SAK 2.5 terminals would be acceptable.

TABLE 1

JUNCTION BOX TYPE	MAXIMUM DISSIPATED POWER FOR T5 Tamb=40°C (WATT)	MAXIMUM DISSIPATED POWER FOR T5 Tamb=55°C (WATT)	MAXIMUM DISSIPATED POWER FOR T5 Tamb=65°C (WATT)	MAXIMUM DISSIPATED POWER FOR T6 Tamb=40°C (WATT)	MAXIMUM DISSIPATED POWER FOR T6 Tamb=55°C (WATT)	MAXIMUM DISSIPATED POWER FOR T6 Tamb=65°C (WATT)	MAXIMUM INTERNAL LINEAR DIMENSION (meter)
MARK III	8.48	4.87	3.00	4.87	3.00	1.06	0.165

TABLE 2

COPPER CONDUCTOR RESISTANCE		
CONDUCTOR CROSS SECTIONAL AREA (mm ²)	RESISTANCE (OHM/m)	RESISTANCE FOR 0.165m CONDUCTOR LENGTH (OHM)
0.5	0.036	0.00594
0.7	0.0258	0.004257
1	0.0181	0.0029865
1.5	0.0121	0.0019965
2.5	0.00741	0.0012265
4	0.00461	0.00076065
6	0.00308	0.0005082
10	0.00183	0.00030195
16	0.00115	0.00018975
25	0.000724	0.00011946
35	0.000524	0.00008646
50	0.000362	0.00005973
70	0.000268	0.00004422
95	0.000189	0.000031185
120	0.000151	0.000024915
150	0.000121	0.000019965
240	0.00007625	1.25813E-05
300	0.000061	0.000010065

TABLE 3

MARK III TERMINALS DATA						
TERMINAL TYPE	CONDUCTOR SIZE mm ²		ATEX CERTIFICATE NO.	MAX AMPS	MAX VOLTS	TERMINAL RESISTANCE (OHM)
	MIN	MAX				
WDU1.5ZZ*	0.13	25	KEVA98ATEX1685 U	15	550	0.000862
WDU25/ 1.5 ZR	0.13	4	KEVA98ATEX1685 U	21	550	0.000654
WDU25	0.13	4	KEVA98ATEX1683 U	21	550	0.0002
WDU25N	0.13	4	KEVA98ATEX1683 U	21	420	0.00031
WDU4	0.13	6	KEVA98ATEX1683 U	28	750	0.00014
WDU6	0.5	10	KEVA98ATEX1683 U	36	550	0.00009
WDU10	1.31	16	KEVA98ATEX1683 U	50	550	0.000075
WDU16	1.5	25	KEVA98ATEX1683 U	66	750	0.00005
WDK25*	0.13	4	KEVA98ATEX1687 U	21	275	0.000862
SAK25*	0.5	4	KEVA97ATEX1798 U	24	500	0.00036
SAK4	0.5	6	KEVA97ATEX1798 U	32	800	0.0003
SAK6N	0.5	10	KEVA97ATEX1798 U	41	800	0.0002
SAK10	1.5	16	KEVA97ATEX1798 U	57	800	0.00004
SAK16	2.5	16	KEVA97ATEX1798 U	76	1000	0.000023
ZDU25*	0.08	4	KEVA97ATEX2521 U	21	550	0.00065
ZDU253AN	0.08	4	KEVA97ATEX2521 U	21	550	0.00069
ZDU254AN	0.08	4	KEVA97ATEX2521 U	21	550	0.0006
ZDU2522AN	0.08	4	KEVA97ATEX2521 U	21	550	0.00082
ZDU4	0.21	6	KEVA97ATEX2521 U	28	550	0.00041
ZDU6	0.21	6	KEVA97ATEX2521 U	36	550	0.00027
ZDK251.5*	0.08	25	KEVA97ATEX4677 U	18	275	0.00082
UK1.5N*	0.14	0.7	KEVA98ATEX1651 U	17	275	0.0004571
UK25N	0.2	25	KEVA98ATEX1651 U	28	550	0.0004166
UK3N	0.2	25	KEVA98ATEX1651 U	28	750	0.0006
UK5N	0.2	4	KEVA98ATEX1651 U	38	750	0.000375
UK6N	0.2	6	KEVA98ATEX1651 U	53	750	0.000153
UK10N	0.5	10	KEVA98ATEX1786 U	73	750	0.0001228
UK16N	0.75	16	KEVA98ATEX1786 U	88	750	0.000171
RTP25**	0.5	4	KEVA04ATEX2265 U	24	500	0.000146
RTP4	0.5	4	KEVA04ATEX2265 U	32	500	0.000175
RTP6	0.5	10	KEVA04ATEX2265 U	41	800	0.000066
RTP10	0.5	16	KEVA04ATEX2265 U	57	800	0.000072
RTP16	0.5	16	KEVA04ATEX2265 U	76	800	0.000112

* WEIDMULLER / KLIPPPON SAK & WDU & WDK & ZDU &
ZDK & WFF.
** PHOENIX CONTACT UK & UKH
*** RAAD RTP

RANGE OF TERMINALS ARE COVERED BY COMPONENT
CERTIFICATES LISTED IN TABL 3 ALL CODED EExe II.